


Automatic Water On-Off

One way to turn the water on is to place your hands directly under the spout and parallel from the control panel. The maximum run time is 2 minutes.

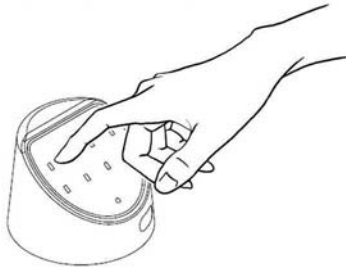


Changing Water Temperature

The top row of sensors adjust the water temperature. From left to right, the temperature settings are: Hot, Medium Hot, Lukewarm and Cold. When the unit is in continuous water flow mode, hold your finger 0.5 inches above the sensor for 0.4 seconds. Aim just below the LED.


Changing Water Flow

The bottom row of sensors adjust the water flow. From left to right, the flow settings are: Low Flow, Half Flow, Three Quarter Flow and Full Flow. When the unit is in continuous water flow mode, hold your finger 0.5 inches above the sensor for 0.4 seconds. Aim just below the LED.

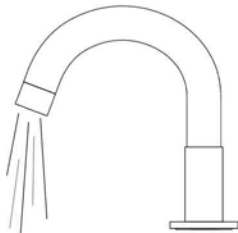


Smart Automatic Flush Mode

When the faucet is idle for a period of six hours, the unit will institute a "Smart Auto Flush Mode". The flush mode will dispense water for 10 seconds with a full cold, full flow setting. This helps to clear out any stagnant water that may introduce bacteria into the water system, such as Legionella.

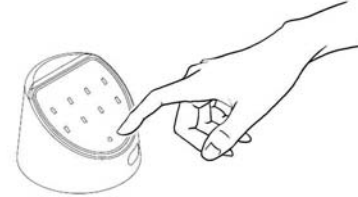


Turn Continuous Water Flow On and Off

Another way to start the water flow is to turn on the continuous water flow. You can do this by placing a finger 0.5 inches above the power symbol for 0.4 seconds. You can also use the back of your hand. The default run time for continuous water is 30 seconds.

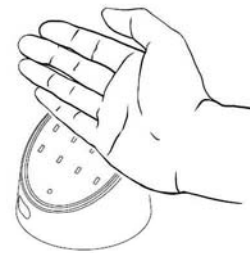

Preset Water Temp and Water Flow

The default water temperature and water flow rate can be changed. Turn on the continuous water flow and make your desired selection for water temperature and water flow. Hold your hand 0.5 inches above the top row of sensors for 0.4 seconds. The power symbol will blink to confirm your new settings.

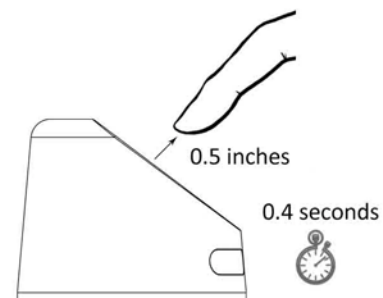

For the sensors to operate properly, your finger must be held right below the LED, at a height of 0.5 inches. Your finger must be held steadily for a duration of 0.4 seconds.